



单向阀/ STOP FITTINGS




作用/ APPLICATIONS

用在气动管经常更换的地方
Used in the place where pneumatic piping frequently changes.

特点/ FEATURES

当管子断开连接时, 气体是完全被阻拦住的, 只有当重新连接上并且确保安全后, 气体才能流通。
Air is completely blocked when the tube is released and the air flows again only after connection to ensure safety. The air flows only when the tube is connected.


结构图/ STRUCTURE CHART

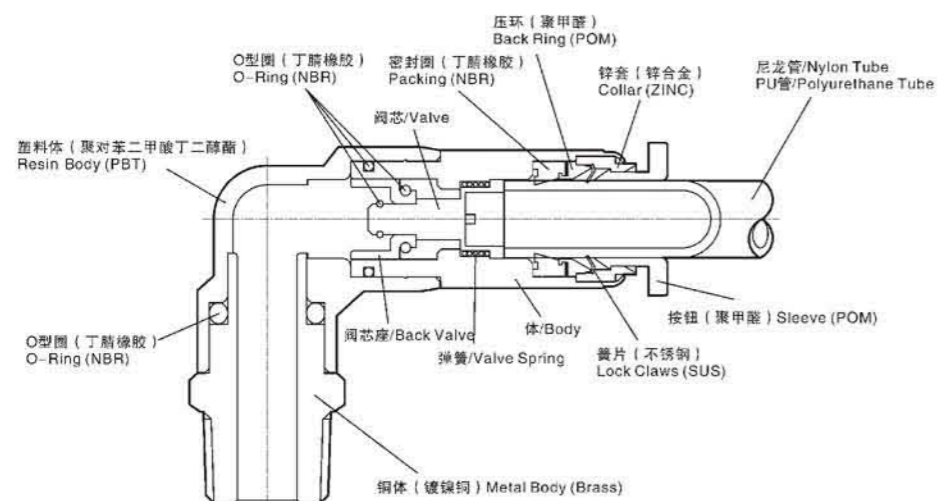

技术参数/ SPECIFICATIONS


使用流体/Fluid	空气 (无其他的气体 and 液体) / Air (No other gases or liquids)	
使用压力范围/Operating Pressure	0~150PSI	0~9.9Kgf/cm ² (0~990KPa)
负压/Negative Pressure	-29.5in Hg	-750mmHg (-750Torr)
使用温度范围/ Operating Temperature	32~140°F	0~60°C
使用软管/Applicable Tube	PU及尼龙 / Polyurethane and Nylon	

ISPC

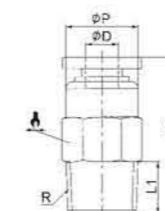


MODEL	ΦD	R	L1	L2	ΦP	孔
ISPC 04-01	4	R1/8	7.5	26	10	10
ISPC 06-01	6	R1/8	7.5	28	12	12
ISPC 06-02		R1/4	9.5	28	12	14
ISPC 08-01	8	R1/8	7.5	29	14	14
ISPC 08-02		R1/4	9.5	33	14	14
ISPC 08-03		R3/8	10.5	33	14	17
ISPC 10-02	10	R1/4	9.5	36	17	17
ISPC 10-03		R3/8	10.5	36	17	17
ISPC 10-04		R1/2	13.5	36	17	21
ISPC 12-02	12	R1/4	9.5	42	20	21
ISPC 12-03		R3/8	10.5	42	20	21
ISPC 12-04		R1/2	13.5	42	20	21

ISPL

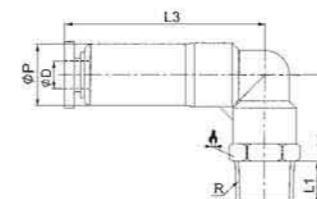

MODEL	ΦD	R	L1	L2	L3	ΦP	孔
ISPL 04-M5	4	M5	3.5	21.3	31	11	10
ISPL 04-M6		M6	4	21.8	31	11	10
ISPL 04-01		R1/8	7.5	23.8	31	11	10
ISPL 06-M5	6	M5	3.5	21.7	32	13	12
ISPL 06-M6		M6	4	22.2	32	13	12
ISPL 06-01		R1/8	7.5	24.2	32	13	12
ISPL 06-02		R1/4	9.5	26.7	32	13	14
ISPL 08-01	8	R1/8	7.5	27.5	41	14.5	14
ISPL 08-02		R1/4	9.5	29.5	41	14.5	14
ISPL 08-03		R3/8	10.5	31	41	14.5	17
ISPL 10-02	10	R1/4	9.5	34.3	48	18.5	17
ISPL 10-03		R3/8	10.5	35.3	48	18.5	17
ISPL 10-04		R1/2	13.5	38.8	48	18.5	21
ISPL 12-02	12	R1/4	9.5	36	55.5	21	21
ISPL 12-03		R3/8	10.5	37	55.5	21	21
ISPL 12-04		R1/2	13.5	40	55.5	21	21

ISPU

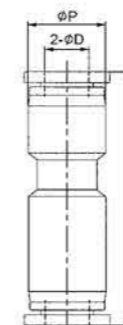

MODEL	ΦD	ΦP	L
ISPU 04	4	11.5	42
ISPU 06	6	13.5	46
ISPU 08	8	15	54
ISPU 10	10	19	58
ISPU 12	12	21.5	67